



# Einhell

# EXPERT

## POWER X-CHANGE

Cordless Chain Saw

**GE-LC 18/25 Li-Solo**

**Item No.: 4501761**

Ident No.: 21020

Bar Code: 4006825608342

The Einhell cordless GE-LC 18/25 Li-Solo combines the outstanding quality of an Einhell product with the cutting performance of a high-quality OREGON guide bar and chain. Kickback protection and an instant-reaction mechanical chain brake protect you while you are working with the chainsaw. A catch bolt holds on to the chain if it jumps off the rail. The rugged metal stop claw keeps the saw stable for your added safety. The ergonomic handle gives you a firm grip on the cordless chainsaw. No tools are needed to adjust the chain tension or replace the chain. The chain is lubricated automatically. The large opening in the oil reservoir eliminates the need for a funnel. This product comes without a battery or charger.

## Features & Benefits

- High-quality chain and bar from OREGON
- Toolless chain tensioning and changing
- Ergonomic handle
- Sturdy stop claws made of metal
- Kickback protection with mechanical instant chain brake
- Big filler opening
- Automatic chain lubrication
- Chain catch bolt
- Supplied without battery and charger (available separately)




## Technical Data

- Sword length 250 mm
- Max. cutting length 23 cm
- Chain cutting speed 4.5 m/s
- Oil tank capacity 200 mL

## Logistic Data

- Product weight (kg) 2.9 kg
- Gross weight (kg) 3.99 kg
- Dimensions single packaging 225 x 480 x 245 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 16.5 kg
- Dimensions Export Carton 500 x 380 x 515 mm
- Container quantity (20"/40"/40"HC) 1088 | 2208 | 2760

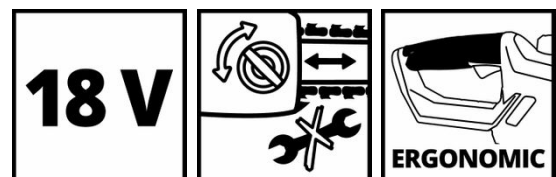

## Available as special accessories



Ersatzkette 25cm 1,1 40T 3/8  
Chain Saw Accessory  
Item No.: 4501754  
Bar Code: 4006825607024  
Einhell Accessory



Ersatzschwert 25cm 1,1  
Chain Saw Accessory  
Item No.: 4501753  
Bar Code: 4006825607017  
Einhell Accessory



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 3,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512041  
Bar Code: 4006825613698  
Einhell Accessory



18V 4,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory




Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V 3,0 Ah Power-X-Change  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory

## Battery-Running-Times

One Battery for All	 sawing <sup>1</sup> (pieces)
1.5 Ah	50
2.0 Ah	70
2.5 Ah	85
3.0 Ah	100
4.0 Ah	130
5.2 Ah	180
6.0 Ah	200

For best performance select a battery with at least 2.5 Ah

Test setup:

1) scantling 70x70 mm