


A


No.	Código	Clave	Descripción
1	921072	R1-COMP-120LV	Tornillo M6x45
2	921073	R2-COMP-120LV	Rondana de presión 6
3	921074	R3-COMP-120LV	Conector
4	921075	R4-COMP-120LV	Tapa de cilindro
5	921076	R5-COMP-120LV	Junta de tapa de cilindro
6	921077	R6-COMP-120LV	Placa de válvula
7	921078	R7-COMP-120LV	Hoja de válvula
8	921079	R8-COMP-120LV	Junta
9	921080	R9-COMP-120LV	Junta de válvula
10	921081	R10-COMP-120LV	Cilindro
11	921082	R11-COMP-120LV	Junta de cilindro
12	921083	R12-COMP-120LV	Anillo de pistón
13	921084	R13-COMP-120LV	Anillo de aceite
14	921085	R14-COMP-120LV	Pistón
15	921010	R15-COMP-120LV	Perno de pistón
16	921011	R16-COMP-120LV	Seguro "C"
17	921012	R17-COMP-120LV	Biela
18	921013	R18-COMP-120LV	Tapón
19	921014	R19-COMP-120LV	Cárter
19.1	904933	R19.1-COMP-120LV	Tapón de llenado de aceite
20	921110	R20-COMP-120LV	Conector
21	921111	R21-COMP-120LV	Nivel de aceite
22	921112	R22-COMP-120LV	Tornillo de drenado de aceite
23	921113	R23-COMP-120LV	Tuerca M8
24	921114	R24-COMP-120LV	Rondana de presión 8
25	921115	R25-COMP-120LV	Perno M8x32
26	921116	R26-COMP-120LV	Balero 6204-2RS
27	921117	R27-COMP-120LV	Cigüeñal
28	921118	R28-COMP-120LV	Balero 6205-2RS
29	921119	R29-COMP-120LV	Sello de aceite
30	921120	R30-COMP-120LV	Soporte de guarda
31	921121	R31-COMP-120LV	Soporte de balero
32	921122	R32-COMP-120LV	Tornillo M8x25
33	921123	R33-COMP-120LV	Motor
34	921124	R34-COMP-120LV	Capacitor de arranque
35	921125	R35-COMP-120LV	Capacitor de trabajo
36	921126	R36-COMP-120LV	Cubierta de capacitor
37	921127	R37-COMP-120LV	Tornillo St 3.9x16
38	921128	R38-COMP-120LV	Interruptor de spbrecarga
39	921129	R39-COMP-120LV	Tubo de descarga </td

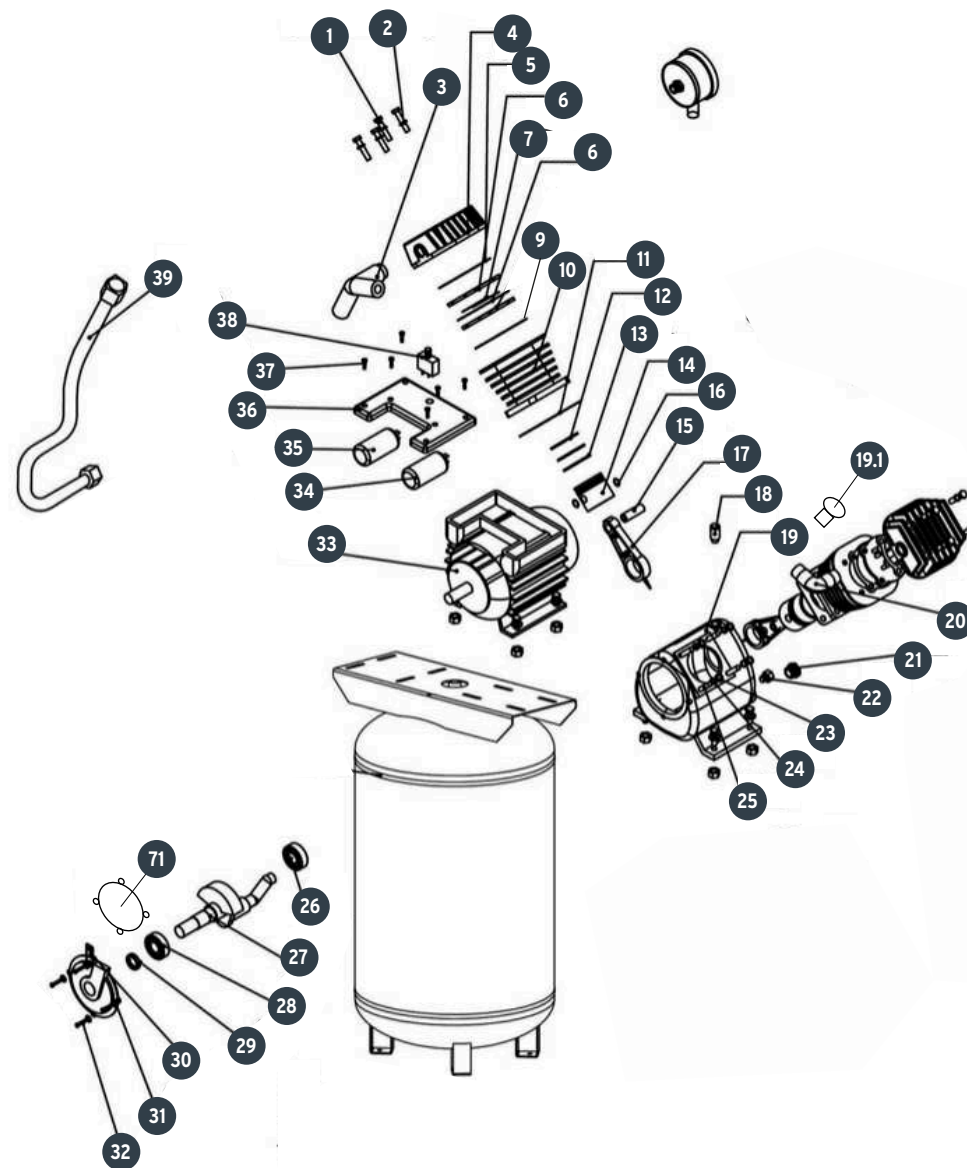

A

B

No.	Código	Clave	Descripción
40	921135	R40-COMP-120LV	Válvula antiretorno
41	921136	R41-COMP-120LV	Conector
42	921137	R42-COMP-120LV	Tubo de alivio
43	921138	R43-COMP-120LV	Tanque
44	921139	R44-COMP-120LV	Polea de motor
45	921140	R45-COMP-120LV	Arandela 8
46	921141	R46-COMP-120LV	Tornillo M8x30
47	921142	R47-COMP-120LV	Tornillo M5x35
47.1	921911	R47.1-COMP-120LV	Tuerca hexagonal 8
48	921143	R48-COMP-120LV	Arandela 5
49	921144	R49-COMP-120LV	SopORTE
50	921145	R50-COMP-120LV	Guarda
51	921146	R51-COMP-120LV	Banda
52	921147	R52-COMP-120LV	Polea de compresor
53	921148	R53-COMP-120LV	Tuerca M10
54	921149	R54-COMP-120LV	Rondana
55	921150	R55-COMP-120LV	Pata
55.1	921151	R55.1-COMP-120LV	Tornillo
55.2	921152	R55.2-COMP-120LV	Arandela
56	921153	R56-COMP-120LV	Drenaje de tanque
57	921154	R57-COMP-120LV	Cable
58	921155	R58-COMP-120LV	Tuerca
59	921156	R59-COMP-120LV	Válvula reguladora
60	921157	R60-COMP-120LV	Válvula de salida
61	921158	R61-COMP-120LV	Válvula de seguridad
62	921159	R62-COMP-120LV	Manómetro
63	921160	R63-COMP-120LV	Presostato
64	921161	R64-COMP-120LV	Filtro de aire
65	921162	R65-COMP-120LV	Tubo conector
66	921163	R66-COMP-120LV	Cable
67	921164	R67-COMP-120LV	Salida 3/4
69	921165	R69-COMP-120LV	Tornillo Ø8x35 mm
70	921166	R70-COMP-120LV	Arandela plana Ø8 mm
71	906901	R71-COMP-120LV	Junta

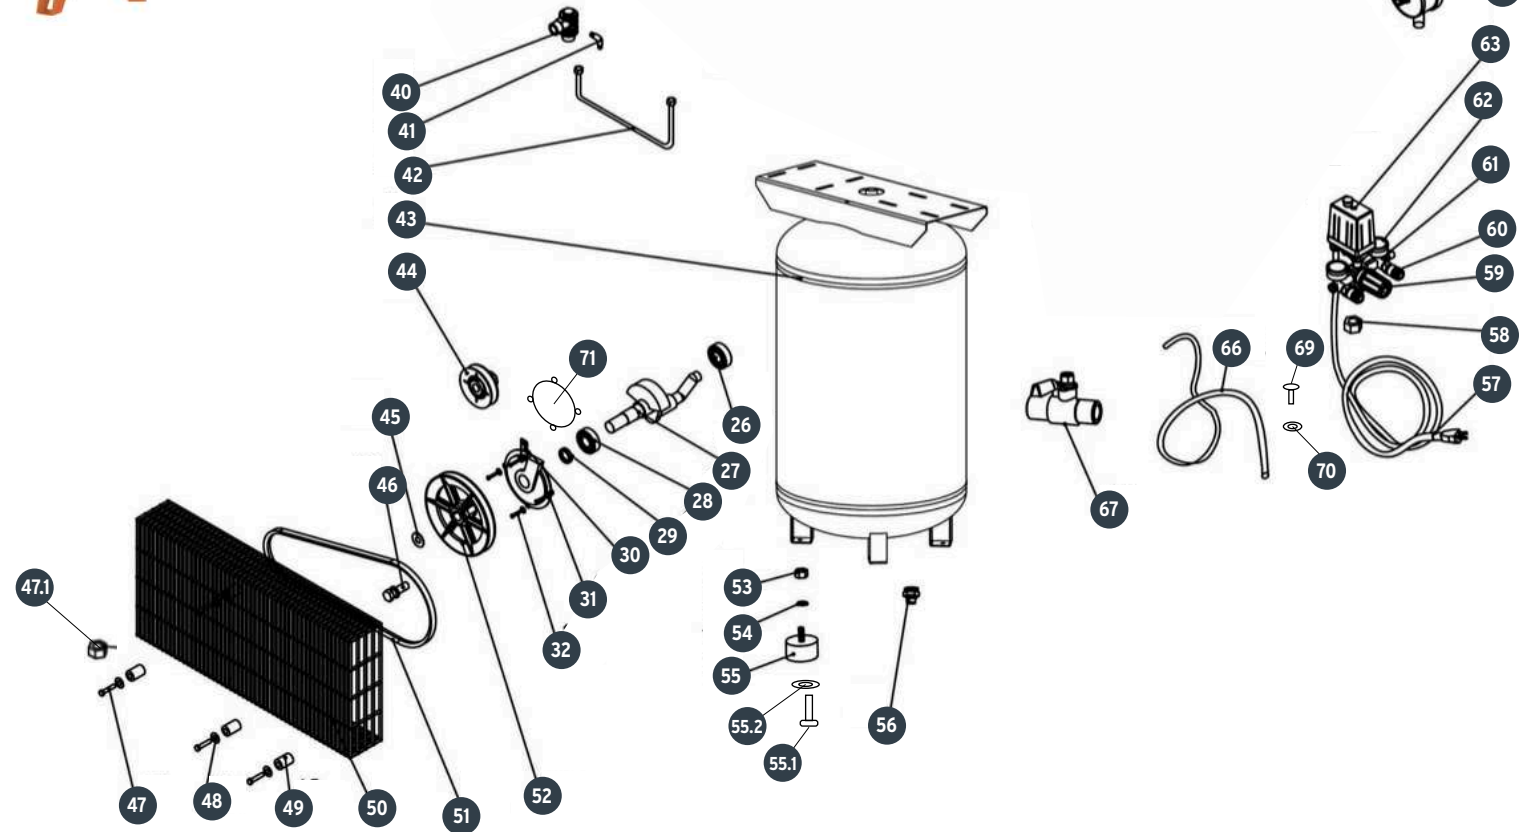

B